

ROTAX



ROTAX FR125 MAX JET TUNING CHART



TEMPERATURE

		TEMPERATURE																																												
		0	1	2	3	4	5	6	7	8	9	10	11	12	13	14	15	16	17	18	19	20	21	22	23	24	25	26	27	28	29	30	31	32	33	34	35	36	37	38	39	40				
BAROMETRIC PRESSURE	1040			178	175						175	172						172	170					170	168						168	165			165		162				162	1040				
	1035																																											160	1035	
	1030																																												1030	
	1025	178																																											1025	
	1020	175																																											1020	
	1015																																												160	1015
	1010																																												158	1010
	1005																																													1005
	1000	175																																												1000
	995	172																																												995
	990																																												158	990
	985																																												155	985
	980																																													980
	975	172																																												975
	970	170																																												970
	965																																													965
	960																																													960
	955	170																																											155	955
	950	168																																										153	950	
	945																																													945
940																																													940	
935																																													935	
930	168	165																																									153	930		



NOTE: THIS TUNING CHART IS USED AS A GUIDE FOR FR125 MAX ONLY
 FOR JUNIOR MAX IS IT RECOMMENDED YOU USE ONE JET SIZE LARGER (IF CHART SHOWS 158, USE 160)